



G.Skoula & Sia o.e. Eslin 16 - 18, Ampelokipi 11523, Athens Greece.

Telephone: 2106427224 , website: [www.radioskoula.gr](http://www.radioskoula.gr)

Instructions for rolling code control **SK012**

Instructions for rolling code control:

We press the two upper buttons (buttons 1 and 2) at the same time. When the light starts blinking fast, we release the two buttons. Then we press the upper left button. As we keep it pressed the light will open and then it will close (for example: it will blink 2 times if it is a BFT).

We press the two down buttons (buttons 3 and 4) at the same time and when the light starts blinking fast it means the code is saved/locked on BFT. Same thing happens to all the remote models.

It can be programmed with 4 different codes.



	<p><b>NICE SMILO</b> Led will blink 1 time fast</p>		<p><b>FOX</b> Led will blink 7 times fast</p>
	<p><b>BFT</b> Led will blink fast 2 times.</p>		<p><b>PUJOL</b> Led will blink fast 8 times.</p>
	<p><b>BENICA ALLMATIC</b> Led will blink fast 3 times.</p>		<p><b>FAAC</b> Led will blink fast 9 times.</p>
	<p><b>DEA</b> Led will blink 4 times fast.</p>		<p><b>MUTANTCODE</b> Led will blink 1 time with longer duration.</p>
	<p><b>ERREKA</b> Led will blink 5 fast times.</p>		<p><b>FOX</b> Led will blink fast 1 time and 1 time with longer duration.</p>
	<p><b>GBD</b> Led will blink fast 6 times.</p>		<p><b>APRIMATIC</b> Led will blink 1 time with longer duration and 2 times fast.</p>